



ANALYTIC SYSTEMS

Power Conversion Solutions

INSTALLATION & OPERATION MANUAL



VTC1000R Series DC/DC Voltage Converter

An ISO9001 and AS9100 Registered Company Battery Chargers • Inverters • Power Supplies • Voltage Converters

8128 River Way, Delta B.C. V4G 1K5 Canada T. 604.946.9981 F. 604.946.9983 TF. 800.668.3884 (US/CANADA)

www.analyticsystems.com



ANALYTIC SYSTEMS
Power Conversion Solutions

Copyright (2005-2014) Analytic Systems Ware (1993) Ltd.



IMPORTANT & SAFETY INSTRUCTIONS

1. SAVE THESE INSTRUCTIONS — This manual contains important safety and operating instructions for this voltage converter.
2. Do not expose this voltage converter to rain or snow.
3. Use of an attachment not recommended or sold by the voltage converter manufacturer may result in a risk of fire, electric shock, or injury to persons.
4. Do not disassemble this voltage converter; take it to a qualified serviceman when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
5. To reduce risk of electric shock, disconnect this voltage converter from its power source before attempting any maintenance or cleaning. Turning off the controls will not reduce this risk.
6. CONVERTER LOCATION
 - i. Never place converter directly above battery; gases from battery will corrode and damage converter.
 - ii. Never allow battery acid to drip on converter when reading gravity or filling battery.
7. DC CONNECTION PRECAUTIONS
 - i. Connect and disconnect DC output connections only after setting converter switch to off position.

Analytic Systems, does not recommend the use of the VTC1000R Series Voltage Converters in life support applications where failure or malfunction of this product can be reasonably expected to cause failure of the life support device or to significantly affect its safety or effectiveness. Analytic Systems does not recommend the use of any of its products in direct patient care.

Examples of devices considered to be life support devices are neonatal oxygen analyzers, nerve stimulators (whether used for anesthesia, pain relief, or other purposes), autotransfusion devices, blood pumps, defibrillators, arrhythmia detectors and alarms, pacemakers, hemodialysis systems, peritoneal dialysis systems, neonatal ventilator incubators, ventilators for both adults and infants, anesthesia ventilators, and infusion pumps as well as any other devices designated as “critical” by the U.S. FDA.

Introduction

The model VTC1000R Rack Mount DC/DC Voltage Converter supplies 12, 24, or 48VDC from a 110, 250, or 300 VDC power source. Other input voltages up to 300 volts or output voltages up to 48 volts are also available by special order. The all-new Current Mode switching design offers increased power and reliability in a compact package. Extra input and output filtering reduce EMI to extremely low levels. Reliability features include an input fuse, thermal shut-down, current limiting and short circuit shutdown with automatic recovery. The output voltage is easily adjusted 1.0 volts above or below the standard output voltage to accommodate special requirements. The unit comes with a high quality digital voltage and current meter to allow simultaneous monitoring of output current and voltage.

Specifications

Input Voltages			
Nominal (ip)	110	250	300
Actual	100 - 140	230 - 280	280 - 360
Input Amps (max)	14.5	6.3	5.2
Input Fuse (slow blow)	MDA-20	MDA-10	MDA-6

Output Voltages			
Nominal (op)	12	24	48
Actual	13.6 ± 0.05V	27.2 ± 0.05V	54.4 ± 0.05V
Output Adjustment	± 1.0 Volts		
Output Amps (cont)	60	40	20
Output Amps (max)	70	45	22.5
Output Crowbar	16.0 ± 0.5 V	32 ± 1.0 V	63.9 ± 2.0 V



General	
Switching Frequency	60 ± 2 KHz
Idle Power	< 10 Watts
Noise on Input	< 50 milli-Volts
Noise on Output	< 50 milli-Volts
Transient Response	< 2V for 50% Surge (Output Amps/2)
Efficiency	> 85 % @ maximum output
Temp. Range	-40 to +40 deg. C @ maximum output
Isolation	Input-Output & Input-Case 1500 Vdc Output-Case 500 VDC (1500Vdc @ 48 V Out)
Dimensions	19.0 x 13.5 x 3.5 in / 48.3 x 34.3 x 8.9 cm
Clearance	1 Inch (2.5 cm) all around
Material	Marine Grade Aluminum
Finish	Black Powder Epoxy
Fastenings	18-8 Stainless
Weight	10.2 lb / 4.6 kg

** Actual startup is at 22, 42, or 67Vdc Input, depending on model

* This is Analytic Systems' suggested range. Please consult your battery manufacturer for their recommendations.

* Specifications subjects to change without notice.

Designed and manufactured by: **ANALYTIC SYSTEMS WARE (1993) LTD.**

8128 River Way

Delta, BC V4G 1K5 Canada

www.analyticsystems.com

p. 604.946.9981 f. 604.946.9983

tf. 800.668.3884 US/Canada

analyticinfo@analyticsystems.com Revised August 2014



Installation

MOUNTING

Mount the unit in a DRY location. Allow at least 4 inches of clearance around it for adequate cooling.

POWER CONNECTION

The unit is supplied with power leads about 3 feet long. This should normally be adequate to connect to a source of power. If you must extend the power leads, be sure to use at least a good quality (typeTEW) wire of at least the same gauge as supplied with the unit. The wire colours are

- Red - Positive
- Black- Negative

All connections should be made inside an appropriate junction box. Refer to the specifications table for the correct sizing of the circuit breaker in the distribution panel.

A ground stud is provided to bond the chassis to local ground to reduce or eliminate EMI.


OUTPUT CONNECTIONS

Two Positive output terminals and two Negative output terminals are provided. Connect only one wire to each terminal. Ensure that the total average load connected does not exceed the continuous current rating of the unit.

To ensure spark free connections the power switch must be in the OFF position prior to making the connections to the load(s).


For 12Vdc Model Only!

For 12 Vdc models only, the output terminals must be connected as shown below if the load current is greater than 50 amps! than 50 amps!

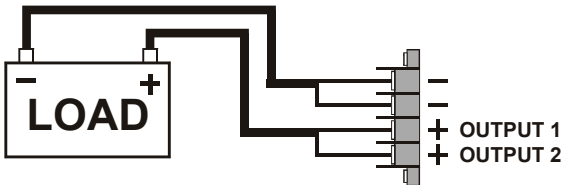



LOAD SHARE OPTION

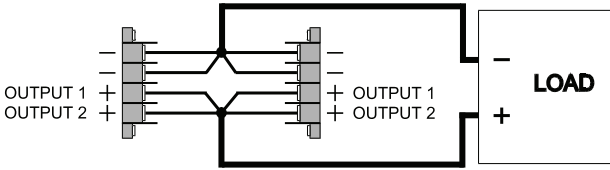

The units may be configured for load sharing if they are equipped with the optional output isolation diodes. To confirm that your unit has these diodes, use an ohmmeter to measure the resistance between the two positive output terminals. If the diodes are present the terminals will measure as not connected. If the diodes are NOT present, the terminals will measure as a short circuit. Assuming the output isolation diodes are present, connect a one-foot piece of red wire of the appropriate gauge (as shown in the table below)

Output Voltage (Vdc)	12	24	32	48
Wire Gauge (AWG)	#8	#10	#12	#14

Operation

Turn the switch on front plate of the unit on, to energize the outputs. The green 'Output On' indicator light will glow to indicate the proper operation of the unit.

OUTPUT ADJUSTMENT

The unit has an adjustment potentiometer to allow up to +/- 0.5V adjustment of the output voltage. This potentiometer is accessed through a small hole on the front panel of the voltage converter. As shipped from the factory, the unit is preset for a voltage of 13.6, 27.2, 36.3 or 54.4VDC. If you wish to adjust this voltage reach in with a very small flat blade screwdriver to rotate the potentiometer. Clockwise increases the output voltage and counter clockwise decreases it.

METERS

The meter shows simultaneous voltage and current on either of the two output terminals. A toggle switch permits selection between the output terminals. The meter features bright red LED readouts to permit easy monitoring from many feet or meters away




Troubleshooting

This unit provides LED indicators and a buzzer to help diagnose any problems. The unit should sound the buzzer to alert you prior to shutting itself down. You should immediately check the indicators to determine the cause of the shutdown.

OVERLOAD	Indicates that the output current has exceeded the continuous rating of the unit.
LOW OUTPUT	Indicates that the output voltage is below normal because: The current demanded by the devices connected to the unit exceeds the maximum output current rating, causing the output voltage to drop to maintain the current at the maximum level The input voltage is not high enough for unit to operate,
LOW INPUT	Indicates that the input voltage is below normal because: The input voltage is not in the correct range for proper operation of the unit.
OVERTEMP	Indicates that the Battery Charger is running too hot because: Too much power is being drawn, turn off or unplug some devices. The voltage converter is located in a poorly ventilated area.

If the load exceeds the continuous rating for too long a period, the temperature sensor inside the unit will turn off the outputs. After the unit cools sufficiently, it will automatically come back on. If this happens frequently, remount the unit for increased airflow so it cools better.

Mechanical Drawing

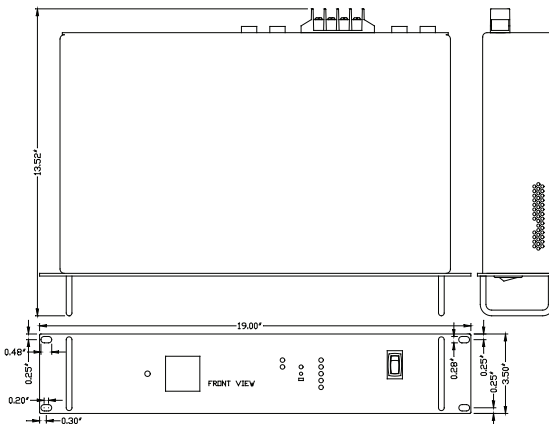



Special Services & Options

Conformal Coating	INCLUDED ON ALL UNITS UNLESS REQUESTED NOT TO as of April 1, 2014
Option "c"	Ruggedization Package (EXTRA Conformal Coating and RTV Compound)
Option "v"	Marine / Industrial Pkg (EXTRA Conformal dipping and RTV Compound)
Option "MS"	Military Pkg (incl. Wide Temp Components, Conformal Dipping and RTV Compound)
Option "w"	Wide Temperature Operation (-40 to +55 C, incl)
Option "SM"	High Voltage Protection on the DC Input Side
Option "d"	Paralleling Diodes
Option "FI"	Forklift Modifications
Option "F"	Open Frame - No chassis just heat sink bars (not for all products)
Special Input	There is no charge for nominal output voltages (ie. 12.0, 24.0, 48.0), but this must be noted at the time of order (Contact Factory for details)
Special Output	
Water tight options	IP66, IPS67, IPS68





Limited Warranty

1. The equipment manufactured by Analytic Systems Ware (1993) Ltd. (the "Warrantor") is warranted to be free from defects in workmanship and materials under normal use and service.
2. This warranty is in effect for:
 - a. 3 Years from date of purchase by the end user for standard products offered in our catalog.
 - b. 2 Years from date of manufacture for non-standard or OEM products
 - c. 1 Year from date of manufacture for encapsulated products.
3. Analytic Systems will determine eligibility for warranty from the date of purchase shown on the warranty card when returned within 30 days, or
 - a. The date of shipment by Analytic Systems, or
 - b. The date of manufacture coded in the serial number, or
 - c. From a copy of the original purchase receipt showing the date of purchase by the user.
4. In case any part of the equipment proves to be defective, the Purchaser should do the following:
 - a. Prepare a written statement of the nature of the defect to the best of the Purchasers knowledge, and include the date of purchase, the place of purchase, and the Purchasers name, address and telephone number.
 - b. Call Analytic Systems at 800-668-3884 or 604-946-9981 and request a return material authorization number (RMA).
 - c. Return the defective part or unit along with the statement at the Purchasers expense to the Warrantor; Analytic Systems Ware (1993) Ltd., 8128 River Way, Delta, B.C., V4G 1K5, Canada.
5. If upon the Warrantor's examination the defect proves to be the result of defective material or workmanship, the equipment will be repaired or replaced at the Warrantor's option without charge, and returned to the Purchaser at the Warrantor's expense by the most economical means. Requests for a different method of return or special handling will incur additional charges and are the responsibility of the Purchaser.
6. Analytic Systems reserves the right to void the warranty if:
 - a. Labels, identification marks or serial numbers are removed or altered in any way.
 - b. Our invoice is unpaid.
 - c. The defect is the result of misuse, neglect, improper installation, environmental conditions, non-authorized repair, alteration or accident.
7. No refund of the purchase price will be granted to the Purchaser, unless the Warrantor is unable to remedy the defect after having a reasonable number of opportunities to do so.
8. Only the Warrantor shall perform warranty service. Any attempt to remedy the defect by anyone else shall render this warranty void.
9. There shall be no warranty for defects or damages caused by faulty installation or hook-up, abuse or misuse of the equipment including exposure to excessive heat, salt or fresh water spray, or water immersion except for equipment specifically stated to be waterproof.
10. No other express warranty is hereby given and there are no warranties that extend beyond those described herein. This warranty is expressly in lieu of any other expressed or implied warranties, including any implied warranty of merchantability, fitness for the ordinary purposes for which such goods are used, or fitness for a particular purpose, or any other obligations on the part of the Warrantor or its employees and representatives.
11. There shall be no responsibility or liability whatsoever on the part of the Warrantor or its employees and representatives for injury to any person or persons, or damage to property, or loss of income or profit, or any other consequential or resulting damage which may be claimed to have been incurred through the use or sale of the equipment, including any possible failure of malfunction of the equipment, or part thereof.
12. The Warrantor assumes no liability for incidental or consequential damages of any kind



ANALYTIC SYSTEMS

Power Conversion Solutions

An ISO9001 and AS9100 Registered Company Battery Chargers • Inverters • Power Supplies • Voltage Converters

8128 River Way, Delta B.C. V4G 1K5 Canada T. 604.946.9981 F. 604.946.9983 TF. 800.668.3884 (US/CANADA)

www.analyticsystems.com